

KEY TO WIRING DIAGRAM

- | | |
|--------------------------------|---------------------------------|
| 1. Alternator | 17. Flasher unit |
| 2. Battery | 18. Line fuse |
| 3. Starter motor | 19. Lighting switch |
| 4. Headlamp | 20. Master starter switch |
| 5. Sidelamp | 21. No charge warning light |
| 6. Main beam warning light | 22. Safety start switch |
| 7. Panel lamp | 23. Horn |
| 8. Plough lamp | 24. Horn push |
| 9. Tail lamp | 25. Temperature gauge |
| 10. Trailer socket | 26. Temperature transmitter |
| 11. L.H. flasher lamp | 27. Fuel gauge |
| 12. R.H. flasher lamp | 28. Fuel tank unit |
| 13. R.H. flasher warning light | 29. Battery condition indicator |
| 14. L.H. flasher warning light | 30. Voltage stabiliser |
| 15. Number plate lamp | 31. Air filter switch |
| 16. Direction indicator switch | 32. Air filter warning light |

———— Printed circuit - - - - If fitted

CABLE COLOUR CODE

B. Black	Y. Yellow	P. Purple
N. Brown	U. Blue	W. White
R. Red	G. Green	LG. Light Green

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.

