



MIDDLEWEIGHT RANGE OF TRACTORS

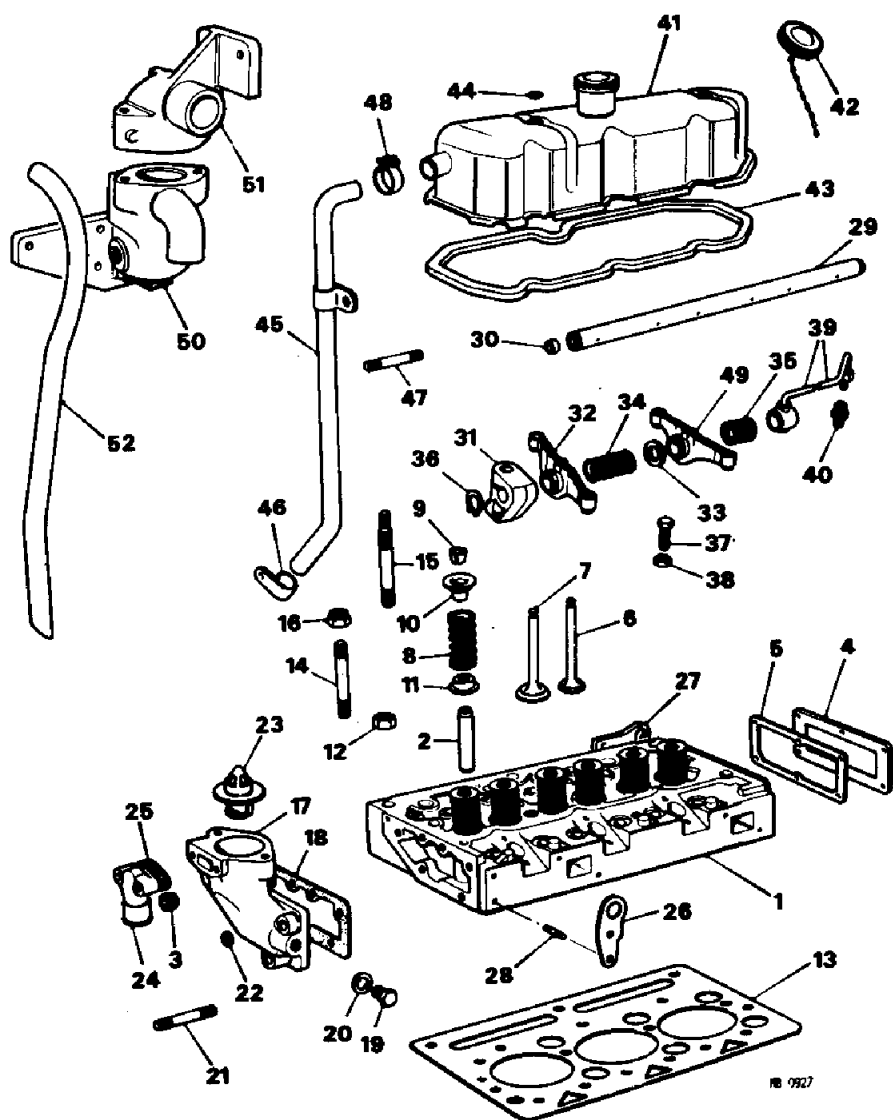

Illus.	Part Number	Description	Quantity	Change Point	Remarks
--------	-------------	-------------	----------	--------------	---------

PERKINS D3-152 DIESEL ENGINE-continued

CYLINDER HEAD-continued

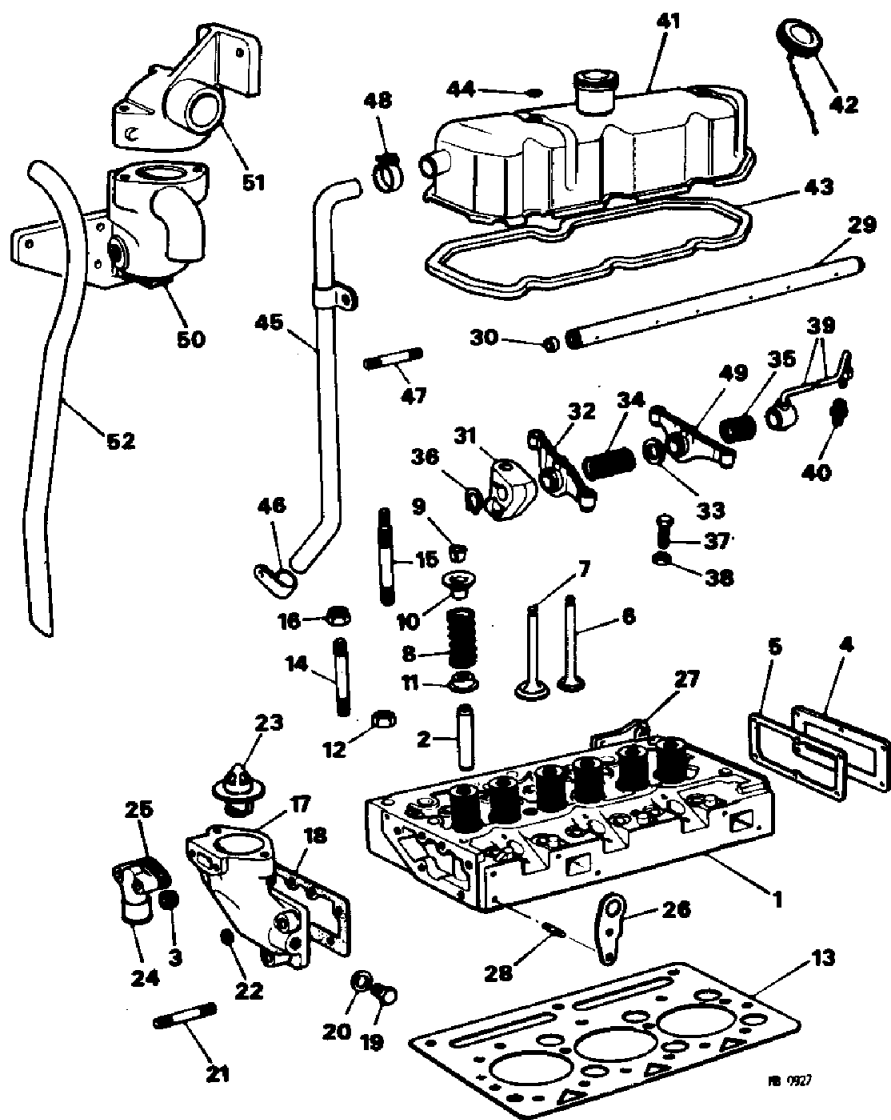

23	AJR	4145	Thermostat	NLA	Use AJR 4233
23	AJR	4233	Thermostat	1	
24	AJR	4180	Connection-by-pass	1	TO(E)152U 100089
51	AHM	2157	Connection-water outlet	1	(E)152U 100090 ON
	AJR	4177	Gasket-thermostat housing to water outlet connection	1	
25	AJR	4181	Gasket-connection	1	
	HNS	513	Screw-connection	2	
	PWN	305	Washer-screw	2	
26	AJR	4194	Plate-lifting-front	1	
27	AJR	4195	Plate-lifting-rear	1	
28	AJR	4192	Stud-plates to head	4	
	WL	600060	Washer-spring	4	
	GHF	202	Nut-stud	4	
29	AJR	4045	Shaft-rocker	1	
30	7H	2335	Plug-shaft	2	
31	7H	2834	Bracket-rocker shaft	4	
32	7H	2871	Lever-rocker-RH	3	
49	7H	2870	Lever-rocker-LH	3	
33	7H	2169	Piece-distance-lever	4	
34	7H	2400	Spring-rocker shaft front and rear	2	
35	AJR	4048	Spring-rocker shaft centre	NLA	
36	7H	2754	Circlip-shaft locating	2	
37	17H	3729	Screw-tappet adjusting	6	
38	17H	3730	Locknut-adjusting screw	6	
39	AJR	4155	Pipe-oil-rocker shaft	1	
40	13H	4930	Union-oil feed pipe	1	
41	AJR	4053	Cover-valve rocker	1	
42	AJR	4054	Cap-oil filler	1	
43	AJR	4055	Gasket-rocker cover	1	
	LNN	205	Nut-rocker cover	2	
	GHF	301	Washer-plain-nut	2	
44	AJR	2457	Washer-nut	2	
45	AJR	4074	Pipe-breather	1	TO(E)152U 100089
52	AHM	2150	Pipe-breather	1	(E)152U 100090
46	AJR	4075	Clip-breather pipe	NLA	
47	AJR	4076	Stud-upper clip to front cover	1	
	WL	600050	Washer-spring	1	
	GHF	201	Nut-stud	1	
48	AJR	4077	Clip-pipe to cylinder head top cover	1	